



# TRANSOM SASHES

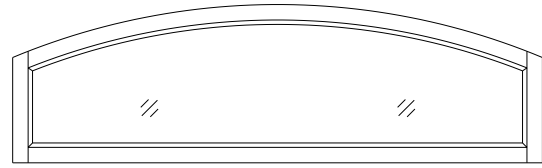


T01000




T01500




T02000

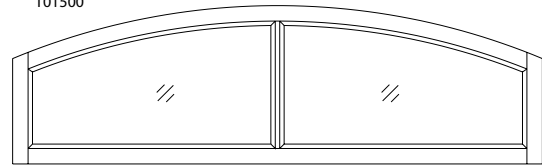


T02500




T03000

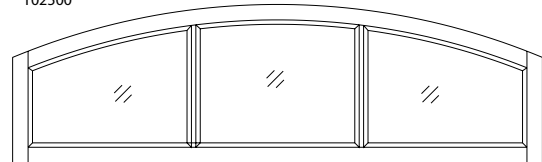


T03500




T04000

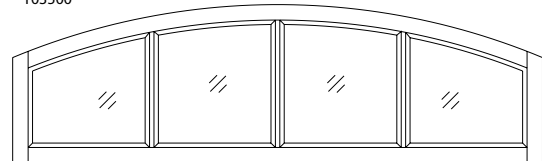


T04500




T05000

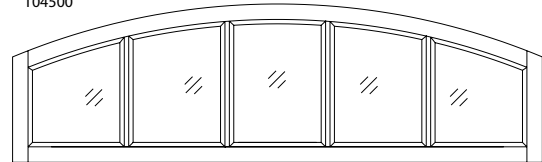


T05500




T06000

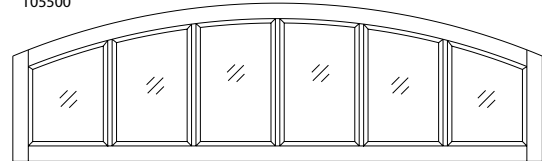

T06500

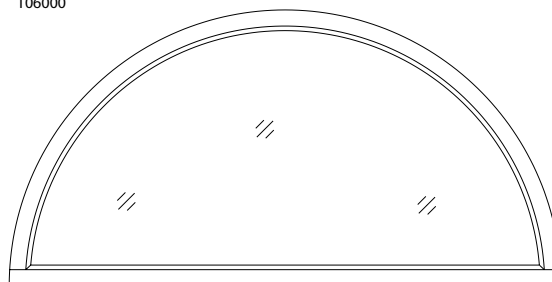


T01600

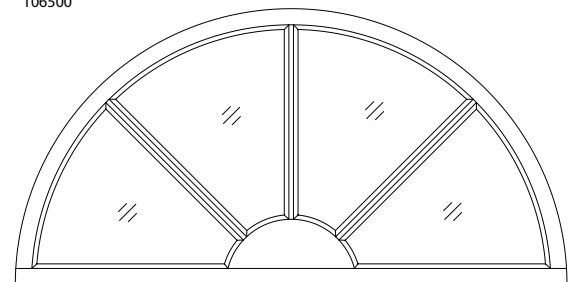

T04600

Drawings shown above feature Transom Sash construction. One lite transoms may also be ordered as Direct Set Transoms (shown bottom right). Please specify when ordering.

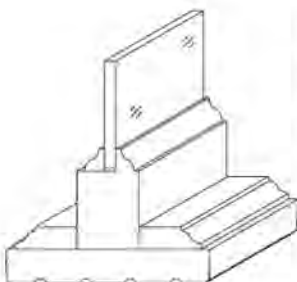


### Transom Sash

Constructed using the same methods as our standard stile and rail, true divided lite doors.

The standard face rail width on a transom sash is 1 3/4".

When ordering a transom sash, please provide us with the dimension of the sash itself, not including the jamb.

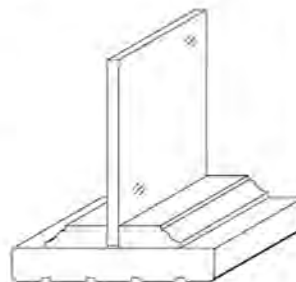

### Direct Set Transom

Direct Set Transoms are constructed by "double stopping" the glass directly on to the jamb. *This option is only available with one lite transom designs.*

When ordering direct set transoms, it is important to specify whether dimensions given are "inside to inside" or "outside to outside" of the frame.